

# GEORGE FOREMAN®

HEALTHY LIVING

*George Foreman*



## GEORGE FOREMAN® SNACK FRESH

Instructions & Warranty

## **IMPORTANT SAFEGUARDS**

When using this appliance, basic safety precautions should always be followed, including the following:

Read all instructions before, and follow whilst using this appliance.

1. To protect against electric shock do not immerse cord, plug or blender base of unit in water or liquid of any sort.
2. Do not use outdoors.
3. Do not use in the bathroom or near any source of water.
3. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
4. This appliance is NOT a toy. Children should be supervised to ensure they do NOT play with the appliance.
5. Cleaning or user maintenance shall not be carried out by children without the supervision of a person responsible for their safety.
6. Always turn off and unplug from the wall power outlet when not in use, before fitting or removing parts, and before cleaning the appliance.
7. To disconnect, ensure the appliance switch is set to off, turn off the wall power outlet, then grasp and pull the plug from the wall outlet. Never pull by the cord.
8. Do not operate this appliance with a damaged cord/plug or after the appliance has been dropped, damaged or has malfunctioned in any manner. Contact customer service for replacement, examination, repair or adjustment.
9. There are no user serviceable parts. If the power cord or appliance is damaged, it must be repaired or replaced by the manufacturer or a suitably qualified person in order to avoid hazard.
10. The use of attachments/accessories not recommended by the appliance manufacturer may cause injuries or damage to the appliance and void warranty.
11. Do not use on an inclined plane or unstable surface.
12. Keep the appliance and the power cord away from the edge of tables or countertops and out of reach of children and persons with reduced physical, sensory and mental capacities.
13. Always keep hands and utensils out of the product when using. Do not touch hot surfaces. CAUTION: Surface becomes hot during use
14. Do NOT move the product while it is in use. Always let it cool before moving, relocating, servicing, or cleaning it.
16. To prevent possible damage to the appliance do not use harsh abrasive or alkaline cleaning agents.
17. Always clean the appliance after use.
18. Follow the instructions when cleaning this appliance.
19. Do not place on or near any heat sources.
20. Misuse of the appliance may cause injury.
21. Do not leave the appliance unattended when in use.
22. Do not use appliance for other than its intended purpose.
23. This appliance is not intended to be operated by means of an external timer or separate remote control system.
24. For added safety, electrical appliances should be connected to a power outlet that is protected by a residual current device (RCD / 'Safety Switch') having a rated residual operating current not exceeding 30mA. Your switchboard may already incorporate an RCD. If unsure, call an electrician for verification and fitting if necessary.

## **SAVE THESE INSTRUCTIONS**

**Spectrum Brands Australia Pty Ltd**

Locked Bag 3004 Braeside  
Victoria 3195 Australia

**Customer Service in Australia**

TollFree: 1800 623 118  
Email: info@spectrumbrands.com.au  
Website: www.spectrumbrands.com.au

**Spectrum Brands New Zealand Ltd**

PO Box 9817 Newmarket  
Auckland 1149 New Zealand

**Customer Service in New Zealand**

TollFree: 0800 736 776  
Email: service@spectrumbrands.co.nz  
Website: www.spectrumbrands.co.nz

## **Spectrum Brands Australia Pty Ltd and Spectrum Brands New Zealand Ltd Warranty Against Defects**

In this warranty:

**Australian Consumer Law** means the Australian consumer law set out in Schedule 2 to the Competition and Consumer Act 2010;

**CGA** means the New Zealand Consumer Guarantees Act 1993;

**Goods** means the product or equipment which was accompanied by this warranty and purchased in Australia or New Zealand, as the case may be;

**Manufacturer, We** or **us** means:

1. for Goods purchased in Australia, Spectrum Brands Australia Pty Ltd ABN, 78 007 070 573;  
or
2. for Goods purchased in New Zealand, Spectrum Brands New Zealand Ltd, as the case may be, contact details as set out at the end of this warranty;

**Supplier** means the authorised distributor or retailer of the Goods that sold you the Goods in Australia or in New Zealand; and

**You** means you, the original end-user purchaser of the Goods.

1. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law, or the CGA. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.
2. The benefits provided by this Warranty are in addition to all other rights and remedies in respect of the Goods which the consumer has under either the Australian Consumer Law or the CGA. The original purchaser of the Goods is provided with the following Warranty subject to the Warranty Conditions:
3. We warrant the Goods for all parts defective in workmanship or materials for a period of 1 year from the date of purchase (**Warranty Period**).

If the Goods prove defective within the Warranty Period by reason of improper workmanship or material, we may, at our own discretion, repair or replace the Goods without charge.

## Warranty Conditions

4. The Goods must be used in accordance with the manufacturer's instructions. This Warranty does not apply should the defect in or failure of the Goods be attributable to misuse, abuse, accident or non-observance of manufacturer's instructions on the part of the user. As far as the law permits, the manufacturer does not accept liability for any direct or consequential loss, damage or other expense caused by or arising out of any failure to use the Goods in accordance with the manufacturer's instructions.
5. Exhaustible components (such as batteries, filters and brushes) of the Goods are included under this Warranty only where there is a defect in workmanship or materials used.
6. The warranty granted under clause 3 is limited to repair or replacement only.
7. Any parts of the Goods replaced during repairs or any product replaced remain the property of the manufacturer. In the event of the Goods being replaced during the Warranty Period, the warranty on the replacement Goods will expire on the same date as for the Warranty Period on the original Goods which are replaced.
8. In order to claim under the warranty granted under clause 3 you must:
  - (a) Retain this warranty with your receipt/proof of purchase; and
  - (b) Return the Goods to us at the relevant address or to the Supplier by prepaid freight within the Warranty Period accompanied with (i) the legible and unmodified original proof of purchase, which clearly indicates the name and address of the Supplier, the date and place of purchase, the product name or other product serial number and (ii) this warranty.
9. This warranty is immediately void if:
  - (a) Any serial number or appliance plate is removed or defaced;
  - (b) The Goods have been serviced or otherwise repaired by a person not authorised to do so by us or where non approved replaced parts are used.
10. The Goods are designed for domestic use only. The Goods must be connected to the electrical voltage requirements as specified in the ratings label located on the Goods.
11. This warranty does not cover the cost of claiming under the warranty or transport of the Goods to and from the Supplier or us.
12. This warranty is only valid and enforceable in Australia against Spectrum Brands Australia Pty Ltd and in New Zealand against Spectrum Brands New Zealand Ltd.

Contact us or the Supplier for further details.

## Register your product online

If you live in Australia please visit: [www.spectrumbrands.com.au/warranty](http://www.spectrumbrands.com.au/warranty)


If you live in New Zealand Please visit: [www.spectrumbrands.co.nz/warranty](http://www.spectrumbrands.co.nz/warranty)

Registration of your warranty is not compulsory, it gives us a record of your purchase AND entitles you to receive these benefits: Product information; Hints and tips; Recipes and news; Information on special price offers and promotions.

**Any questions?** Please contact Customer Service for advice.

Congratulations on the purchase of your George Foreman Snack Fresh. Each unit is manufactured to ensure safety and reliability. Before using the appliance for the first time, please read the instruction book carefully and keep it for future reference. Pass it on if you pass on the appliance.

When using electrical appliances, basic safety precautions should always be followed.

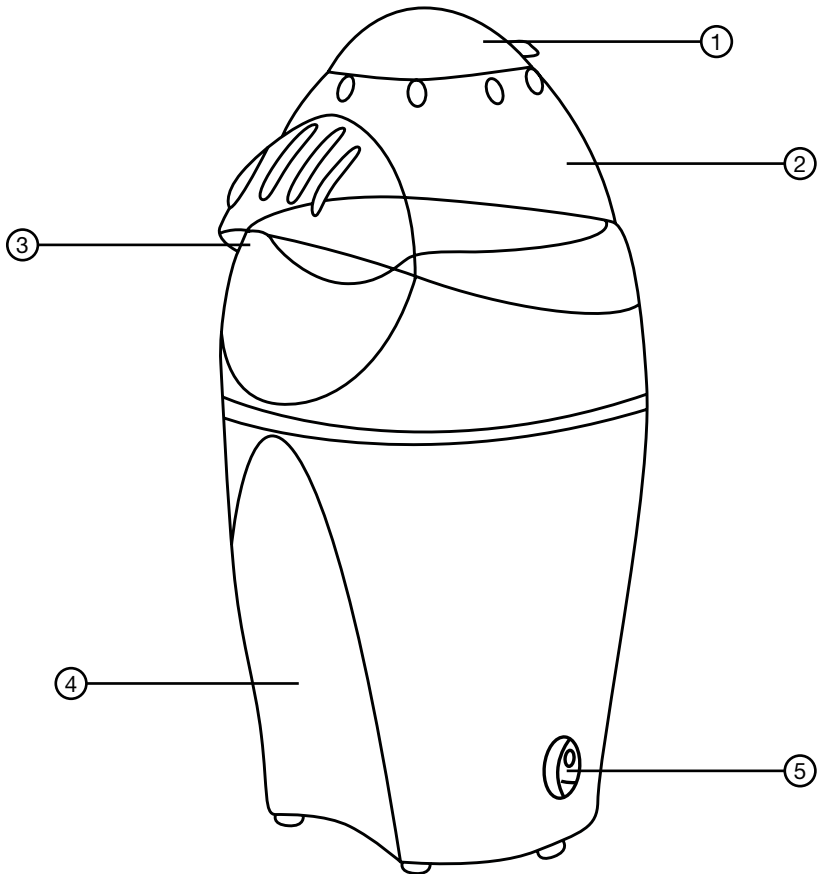

- 1. Cap/Measuring Spoon
- 2. Top Cover
- 3. Popcorn Dispenser

- 4. Base
- 5. On/Off Switch

## BEFORE FIRST USE

- Unpack the product and all parts. Remove all packaging materials, including any stickers or labels.
- Read these instructions carefully.
- Clean the interior surface of the product with a damp cloth. Wipe dry with a soft dry cloth immediately. Do not use any abrasive cleaners. Wipe down the exterior with a soft dry cloth.
- NEVER IMMERSE PRODUCT OR CORD IN WATER OR ANY OTHER LIQUID.
- Position the product on a stable, dry, flat and heat-resistant surface near an electrical outlet.
- Unroll the electrical cord.
- Operate this product on a separate outlet and circuit from other appliances to avoid overloading the circuit.

## HOW TO USE

**WARNING:** *During the first few minutes of initial use, you may notice a little smoke and/or a slight odor. This is normal and should quickly disappear. It will not recur after appliance has been used a few times.*

**CAUTION:** *The surfaces of the appliance get hot. To avoid accidental burns from steam being released, use an oven mitt when the product is in use.*

## FOR HOUSEHOLD USE ONLY

### USING THE APPLIANCE:

- Place the appliance on a flat surface.
- Make sure all parts are in place before operating.
- Ensure the switch on the Popcorn Maker is set to the off position O.
- Add the kernels into the appliance using the measuring spoon. Place a bowl for the cooked popcorn in front of the appliance. The Snack Fresh popcorn maker can take up to 1 full measuring spoon of kernels.
- Turn the appliance on by flipping the switch on the side of the appliance to I.
- The popcorn will start to pop after within seconds and will complete its production within 2 minutes.

**NOTE:** *Do not run the Popcorn Maker for longer than 2 minutes.*

- If making more than one batch, turn off the appliance, let it cool for 15 minutes and repeat the steps for making popcorn.
- As soon as you are finished using the Popcorn Maker, unplug the product and allow it to cool before proceeding with the cleaning instructions.

**NOTE:** *Never run the popcorn maker without popcorn kernels in the appliance. It will cause the unit to overheat, resulting in irreparable damage to the popcorn maker.*

## TIPS AND TECHNIQUES

- Do not overfill the appliance with corn kernels. The Snack Fresh popcorn maker can take up to 1 full measuring spoon of kernels.
- The batch is finished when there is less than one audible pop per second, or after 2 minutes - whichever comes first. Always remember to turn the machine off immediately at the end of a batch.
- Follow the instructions carefully.

## CARE AND CLEANING

Clean the appliance after every use following these steps. This appliance contains no user serviceable parts.

- Unplug the product and allow to cool before cleaning.
- Remove the top cover and measuring spoon and wash with hot, soapy water.
- Ensure there are no corn kernels remaining inside the product.
- Clean the interior/exterior surface of the appliance with a soft sponge. Do not use abrasive or metallic materials.
- Wipe dry with a soft cloth.
- Never place any parts in the dishwasher. Hand-wash ONLY.

***CAUTION: Do not immerse the appliance, the power cord or the plug into water or any liquids.***

## TO STORE

- Unplug the unit.
- Follow the care and cleaning steps in this manual.
- Ensure all parts are dry before storing the unit.

# NOTES

A series of horizontal dotted lines for writing notes.



## NOTES

A series of horizontal dotted lines for writing notes, spanning the width of the page.

# GEORGE FOREMAN<sup>®</sup>

HEALTHY COOKING



## RECIPES

### GEORGE FOREMAN<sup>®</sup> SNACK FRESH

[WWW.GEORGEFOREMAN.COM.AU](http://WWW.GEORGEFOREMAN.COM.AU)  
[WWW.GEORGEFOREMAN.CO.NZ](http://WWW.GEORGEFOREMAN.CO.NZ)

<sup>®</sup> Registered Trademark of Spectrum Brands, Inc., or one of its subsidiaries.

© 2015

# RECIPES

[WWW.GEORGEFOREMAN.COM.AU](http://WWW.GEORGEFOREMAN.COM.AU)  
[WWW.GEORGEFOREMAN.CO.NZ](http://WWW.GEORGEFOREMAN.CO.NZ)

GEORGE FOREMAN and logo are Trade Marks of Spectrum Brands, Inc., or one of its subsidiaries.  
© 2015 Spectrum Brands, Inc.  
Manufactured in China to Spectrum Brands specifications.

Recipes are to be used in conjunction with the GFPC1 George Foreman Snack Fresh.  
All rights reserved. No part of this publication may be reproduced, stored in a retrieval system or transmitted in any form or by any means, electronic, mechanical, photocopying, recording or otherwise, without prior permission of the copyright owner.

---

# RECIPES

## **PARMESAN POPCORN**

### **Ingredients:**

1 measuring spoon of popcorn

1/2 tsp of garlic powder

1/2 tsp of onion powder

1/4 tsp cracked pepper

1/2 tsp sea salt

1/2 cup grated parmesan cheese

2 tbsp of olive oil

### **Steps:**

Follow the steps to make popcorn.

Combine the garlic powder, onion powder, cracked pepper, sea salt and parmesan cheese in a container and set aside.

Tip: Use the GFBLHM1 George Foreman(R) Health Mill to blend herbs and spices.

Place the popcorn in a large mixing bowl, drizzle the olive oil over the popcorn and toss until it is mixed evenly.

Slowly add the dry ingredients and stir the popcorn until it is evenly spread over the popcorn.

Tip: You may also use a large paper bag to shake and mix the dry ingredients evenly.

**Note: All recipes make various batches**

# RECIPES

## **CHILLI POPCORN**

### **Ingredients:**

1 measuring spoon of popcorn

1/2 tsp of chilli flakes

1/2 tsp of garlic flakes

1/2 tsp of dried rosemary

1/2 tsp of sea salt

2 tbsp of lemon infused olive oil

### **Steps:**

Follow the steps to make popcorn.

Combine the chilli flakes, garlic flakes, rosemary and sea salt in a container and set aside.

Tip: use the GFBLHM1 George Foreman(R) Health Mill to blend herbs and spices.

Place the popcorn in a large mixing bowl, drizzle the olive oil over the popcorn and toss until it is mixed evenly.

Slowly add the dry ingredients and stir the popcorn until it is evenly spread over the popcorn.

Tip: You may also use a large paper bag to shake and mix the dry ingredients evenly.

**Note: All recipes make various batches**

# RECIPES

## **PIZZA POPCORN**

### **Ingredients:**

- 1 measuring spoon of popcorn
- 3 tsp of finely grated parmesan cheese
- 1 tsp of dry oregano
- 1 tsp of paprika powder
- 1 tsp of garlic powder
- 2 tsp of sea salt

### **Steps:**

Follow the steps to make popcorn.

Combine the cheese, oregano, paprika, garlic powder and sea salt in a container and set aside.

Tip: use the GFBLHM1 George Foreman(R) Health Mill to blend herbs and spices.

Place the popcorn in a large mixing bowl, drizzle the olive oil over the popcorn and toss until it is mixed evenly.

Slowly add the dry ingredients and stir the popcorn until it is evenly spread over the popcorn.

Tip: You may also use a large paper bag to shake and mix the dry ingredients evenly.

**Note: All recipes make various batches**

## **COCONUT CACAO POPCORN**

### **Ingredients:**

1 measuring spoon of popcorn  
3 tbsp of extra-virgin olive oil  
2 tbsp of raw cacao nibs  
2 tbsp of pecans, chopped  
2 tbsp of dried cherries, chopped  
3 tbsp of unsweetened coconut flakes  
pinch ground coriander  
pinch ground cinnamon

### **Steps:**

Follow the steps to make popcorn.

Combine the raw cacao nibs, pecans, coconut flakes, coriander and cinnamon in a container and set aside.

Place the popcorn in a large mixing bowl, drizzle the olive oil over the popcorn and toss until it is mixed evenly.

Slowly add the dry ingredients and stir the popcorn until it is evenly spread over the popcorn.

Sprinkle the cherries over the top of the popcorn.

Tip: You may also use a large paper bag to shake and mix the dry ingredients evenly.

**Note: All recipes make various batches**

# RECIPES

## **SPICY POPCORN**

### **Ingredients:**

1 measuring spoon of popcorn

2 tablespoons olive oil

1/2 teaspoon sweet paprika

1 teaspoon salt

1/2 teaspoon garlic powder

1 teaspoon cumin

1/4 teaspoon cayenne pepper

### **Steps:**

Follow the steps to make popcorn.

Combine the cheddar cheese powder, mustard powder, cayenne pepper and set aside.

Place the popcorn in a large mixing bowl, drizzle the olive oil over the popcorn and toss until it is mixed evenly.

Slowly add the dry ingredients and stir the popcorn until it is evenly spread over the popcorn.

Add salt and pepper to taste.

You may also use a large paper bag to shake and mix the dry ingredients evenly.

**Note: All recipes make various batches**