

REMINGTON™

FC1000



Use and Care Guide

Register Your New Product Today!

By registering your new Remington® product, you will receive these important benefits:
Proof of Ownership • Product Protection • Product Registration • Special Offers
Register online at: RemingtonProducts.com

IMPORTANT SAFETY INSTRUCTIONS

When using electrical products, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING.

DANGER

TO REDUCE THE RISK OF ELECTRIC SHOCK:

- The charging stand and adapter can not be used in a bath or shower.
- Do not reach for an appliance that has fallen into water while plugged in. Unplug it immediately.
- Do not place or drop into water or other liquid while plugged in.
- Do not place or store this appliance where it can fall or be pulled into a tub or sink while plugged in.
- This cleansing brush is designed for wet use and may be used in the shower. DO NOT fully submerge in water.
- Except when charging, always unplug this appliance from the electrical outlet immediately after using.
- Unplug this appliance before cleaning it.

WARNINGS AND SAFETY PRECAUTIONS

Before you start using the Facial Cleansing Brush, be sure to read all the warnings and safety information to check if the product is suitable for you.

TO REDUCE THE RISK OF BURNS, ELECTROCUTION, FIRE, OR INJURY TO PERSONS:

- This appliance is for household use only.
- An appliance should never be left unattended when it's plugged in, except when charging a rechargeable appliance.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

- Children should be supervised to ensure they do not play with the appliance.

- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by Spectrum Brands, Inc.

- Keep the cord away from heated surfaces.

- Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or if it has been dropped into water.

- Never drop or insert any object into any of the appliance's openings.

- Do not use outdoors or operate where aerosol (spray) products are being used, or where oxygen is being administered.

- Do not use an extension cord or a voltage converter with this appliance.

- Do not wrap the cord around the appliance.

- For additional protection the installation of a residual current device (RDC) with a rated residual operating current not exceeding 30mA is advisable. Ask an electrician for advice necessary.

- After use the appliance should be cleaned to avoid the accumulations of grease and other residues.

- Always store this appliance and cord in a moisture-free area. Do not store it in temperatures exceeding 140°F (60°C).

- Avoid using on the delicate skin around the eyes.

- DO NOT use the cleansing brush on the same area more than twice a day.

- DO NOT use the cleansing brush on areas with open wounds, sunburnt skin, chapped or irritated skin.

- DO NOT use if you suffer from skin diseases or skin irritations such as severe/active acne or skin infection.

- DO NOT use if you are taking steroid-based medication.

- DO NOT use the cleansing brush with cleansers containing harsh chemicals or rough particles.

- If you wish to share this product with other users, for hygiene reasons, ensure you changed the brush head. DO NOT share brush heads between multiple users.

- If you experience any pain or discomfort stop using this product and contact your doctor.

Getting Acquainted With The Facial Cleansing Brush

- The Facial Cleansing Brush has been designed and developed for cleansing the face, and neck.
- The rotating (and vibrating) bristles gently provide a deep cleanse to remove make-up, leaving the skin feeling clean and fresh.
- The Facial Cleansing Brush includes 1 brush head:

NORMAL: For everyday deep cleansing, suitable for all skin types, included.
MASSAGING: To revitalize tired skin for a radiant complexion, available online.

Key Features



- 1 Normal Brush Head
- 2 LED Indicator Lights
- 3 On/Off and Speed Selection Switch
- 4 Cleansing Brush Handle
- 5 Charging Stand
- 6 Beauty Bag
- 7 Protective Cap (not shown)
- 8 Power Adaptor (not shown)


Getting Started

Be patient when first using your Cleansing Brush as with any new product, it may take a little while to familiarize yourself with the product. Take the time to acquaint yourself with your Cleansing Brush, as we are confident you will receive years of enjoyable use and complete satisfaction.

Instructions for Charging

1. Always ensure that your hands, cleansing brush and power adapter are dry before charging.

NOTE: Before using for the first time, fully charge the Cleansing Brush. One full charge will take 6 hours.

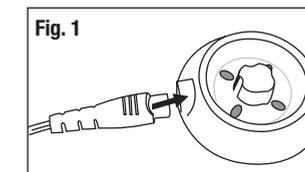

2. Ensure the appliance is switched off.
3. Insert the charging adapter into the charging stand Fig. 1.
4. Plug the adaptor into the wall socket.
5. Place the Cleansing Brush on the charging stand.

- The charging indicator lights will glow in a rotating sequence while the cleansing brush is charging.
- When the Cleansing Brush is fully charged, all charging indicator lights will remain illuminated.
- One full charge will take 6 hours. One full charge allows up to 30 minutes of cordless usage time.

NOTE: If the battery charge is low, all three LED lights will pulse on and off while in use.

Worldwide voltage

- Provided charging adapter works with 100V to 240 V power source.

Quick Charge Function


- The cleansing brush is also equipped with a quick charge function.
- To utilize this function, charge the Cleansing Brush for 30 minutes.
- This will provide approximately four 2-minute uses.

SAVE THESE INSTRUCTIONS

Instructions for Use

NOTE: If you suffer from sensitive skin, we recommend selecting speed setting 1 for the first few uses. If you do not experience any skin reactions then speeds 2 and 3 may be used.

- The Cleansing Brush also comes equipped with a one minute timer to help ensure thorough cleansing of the whole face.
 - We recommend cleansing in 3 sections: Forehead (1), Right side (2) and Left side (3). Fig. 2.
 - The cleansing brush will gently pause every 20 seconds to indicate when to move to the next zone
 - The cleansing brush will automatically switch off after 60 seconds to indicate the end of the brushing time.
- NOTE:** If you change speed settings during cleansing, the timer will set back to zero and the timer will start again.

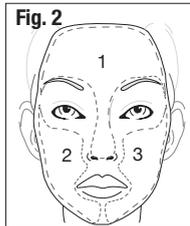

How To Use

- Select the brush head to suit your needs. Gently push the brush head onto the cleansing brush handle until you hear a click. Fig. 3.
 - Moisten the brush bristles by running under water.
- NOTE:** DO NOT use the cleaning brush while completely dry as this can cause skin irritation.
- Dampen your skin with water and apply cleanser onto your skin. Alternatively, apply your cleanser directly onto the brush.
 - Place the cleansing brush directly onto your skin.
 - Switch on using the On/Off button.
 - Select the speed:
 - The cleansing brush will automatically start on speed one.
 - Press the button again for speed 2
 - Press the button again for speed 3.



- Gently glide the brush over the skin in circular motions avoiding the delicate eye area Fig. 4. When you feel a pause, move to the next area.





NOTE: Try to avoid applying too much pressure with the brush when directly on the skin. If this happens, the brush will automatically stop its cycle and switch off. This is perfectly normal and helps to ensure a comfortable treatment. The cleansing brush can be restarted by pressing the On switch.

- If you wish to end the cleansing cycle early press the On/Off button as per below:
- When using speed 1, press On/Off button 3 times
- When using speed 2, press On/Off button twice
- When using speed 3, press On/Off button once
- When not in use, store the brush attachments with the protective caps on. Fig. 5.
- Ensure the bristles are dry before attaching the protective cap.

Replacing The Brush Heads

Removing the brush head:

- Hold the brush handle with one hand.
- With the other hand, gently pull the brush head upwards until it comes off. Fig. 6.
- To replace the brush head, gently push the head back on until you hear a click. Fig. 7.
- For best results, we recommend replacing the Normal brush head approximately every 3 months.

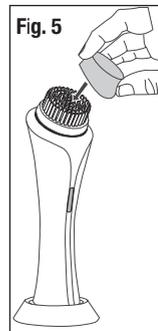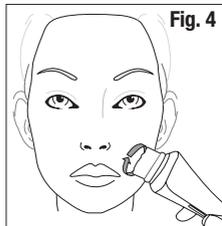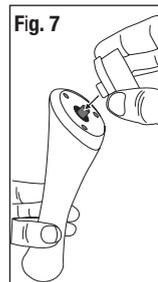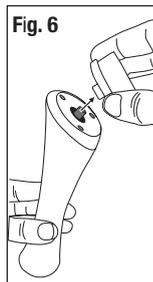

- Replacement Brush Heads are available:
 - Normal: SP-FC1NA
 - Massage: SP-FC4NA

How to Order Parts and Accessories

Two easy ways to order spare parts and accessories are available.

- Order by Phone: U.S. Residents: 1-800-392-6544
- Order Online: RemingtonProducts.com

Cleaning and Maintenance

- To ensure long lasting performance of your cleansing brush, clean the brush head and the handle regularly.
- Ensure the cleansing brush is switched off before cleaning.
- DO NOT attempt to clean any part of this product in a dishwasher.
- DO NOT Submerge the brush handle or charging stand in water.
- Brush Head: Rinse the brush head and bristles after each use.
- Brush Handle: To clean the handle, wipe with a damp cloth.
- Charging stand: Wipe with a damp cloth.

CAUTION: Ensure all parts are dry before connecting the charger into a wall socket.

Product Disposal

- The battery must be removed from the cleansing brush before it is discarded.
- The appliance must be disconnected from the wall socket when removing the battery.
- To remove the rechargeable battery:
- Run the cleansing brush until the motor stops.
- Remove brush head.
- Remove the two screws at the base of the handle.
- Using a small screwdriver, pry the top cap off the handle.
- Pry the battery from the internal assembly.
- Dispose of the battery safely.

Environmental Protection

To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, products marked with this symbol must not be disposed of with unsorted municipal waste, but recycled.



Warranty

Limited Two-Year Warranty

Spectrum Brands, Inc. warrants this product against any defects that are due to faulty material or workmanship for a two-year period from the original date of consumer purchase. This warranty does not include damage to the product resulting from accident or misuse. If the product should become defective within the warranty period, we will replace it free of charge. Return your product and sales receipt with your name, address and day time phone number to: Remington Returns Center, 507 Stokely Dr., P.O. Box 1, Deforest, WI 53532. For more information call 800-736-4648 in the US or 800-268-0425 in Canada.

Warranty excludes:

- Brush head

KEEP ORIGINAL SALES RECEIPT AS PROOF OF PURCHASE FOR WARRANTY PURPOSES.

This warranty does not cover products damaged by the following:

- Accident, misuse, abuse or alteration of the product
- Servicing by unauthorized persons
- Use with unauthorized accessories
- Connecting it to incorrect current and voltage
- Wrapping cord around product causing premature wear and breakage
- Any other conditions beyond our control

SPECTRUM BRANDS, INC. SHALL NOT BE RESPONSIBLE FOR ANY INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT. ALL IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF FITNESS AND MERCHANTABILITY, ARE LIMITED IN DURATION TO TWO YEARS FROM DATE OF ORIGINAL PURCHASE.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state or province to province. Some states do not allow the exclusion or limitation of incidental, special or consequential damages.

Declaration of Conformity

"This equipment has been tested and found to comply with the limits for a Consumer ISM equipment, pursuant to Part 18 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation."

"Please note that changes or modifications of this product is not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment."

"If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help."

"This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation."

Spectrum Brands, Inc. Money-back Offer

If within 30 days after you have purchased your Remington® branded product, you are not satisfied and would like a refund, return it with the sales slip indicating purchase price and date of purchase to the retailer from whom it was purchased.

Spectrum Brands, Inc. will reimburse all retailers who accept the product within 30 days from the date of purchase. If you have any questions concerning the money-back guarantee, please call 800-736-4648 in the U.S. or 800-268-0425 in Canada.

Remington Guarantees Satisfaction After 30 Days!

Remington 60-Day Money Back Guarantee*

If within 60 days after purchasing any Remington® product, you are not completely satisfied and would like a refund, return it with the original dated sales receipt directly to Remington and receive a full refund.** For questions concerning the money-back guarantee, please call 800-736-4648 in the US or 800-268-0425 in Canada.

*Applies to US and Canadian customers' returns only.

**Terms and conditions apply.

- Refund will be in the form of a check issued in US Dollars and will be provided only if all Terms and Conditions are met.
- The following items must be returned to Remington and postmarked no later than 60 days after purchase of the Remington® product:
 - The Remington® product;
 - The original sales receipt indicating price and date purchased; and
 - The completed 60-day money back guarantee form located at RemingtonProducts.com/60day.
- In addition, Remington, in its discretion, must determine that the returned product was used in accordance with the instruction booklet (included with the product at the time of purchase).
- Returns should be mailed prepaid (no collect returns accepted) to:
Remington 60-Day MBG
507 Stokely Drive, Box 1
DeForest, WI 53532
- Refund does not include postage costs for the return of the product, but will include applicable taxes paid by customer, if any.
- No responsibility will be accepted for late, lost, stolen, misdirected or damaged product.
- Please allow 4-6 weeks to receive your refund by check.

Questions or comments: Call 800-736-4648 in the US or 800-268-0425 in Canada. Or visit RemingtonProducts.com

Electrical Characteristics: FC1000 100-240V~ 50/60Hz 200mA

Dist. by: Spectrum Brands, Inc., Middleton, WI 53562

TM Trademark of Spectrum Brands, Inc.

© 2016 Spectrum Brands, Inc. 9/16 15911-00

Made in China T22-0004616-A

Contains a listed adaptor